

Woodstream Falls Condominium Association, Inc.

www.woodstreamfalls.com

9700 East Iliff Avenue • Clubhouse Office • Denver, CO 80231

Office: 303-755-4226 • Fax: 303-755-9193

woodstreamcondos@comcast.net

Each air exchanger has an air release or bleeder valve located in the upper right hand corner of the unit. This valve is at the end of a thin tube and has a standard screwdriver slot at the end of it. To remove the air from your exchanger, turn this screw 1/4 to 1/2 turn to the left or until you here a hissing sound. Once the hissing sound stops turn the screw back to the right.

If this does not solve the problem you may need to call a HVAC specialist to help clean out any dirt that might be in the lines in your exchanger..... Or after removing any possible air through the bleeder valve you may also call the office for assistance.

